





Features


- 1) Decode
When password been forgotten,you can get the decode number by providing the code on the lock body to the distributor or use USB-KEY or Reset Pin to decode.
The password will be changed back to the original management password "4321", user password "1234".
- 2) Introduced with Anti-Theft Technology and Fake PIN password function; you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits.
- 3) Auto-alarm will be activated when input wrong password 4 times and the lock will be died for 60 seconds.
- 4) Automatic power shortage prompts (When lock show  this signal).The lock cannot be operated when the voltage is very low.
- 5) Equipped with 3 pcs of AAA batteries.
- 6) Mechanical laserkey can be provided as emergency opening.

Treatment of some common problems.

Problem	Primary cause	Way to solve the problem
When input the password, alarm twice "di" "di" meanwhile   twinkle one time	Too low voltage	Replace batteries
When input the password, alarm "di" meanwhile signal  is on, lock cannot be opened	Knob is not to the right position	Turn knob to the right position
Touch button without sound, lock can be opened	Buzzer broken	Change buzzer


Add Guanhaiwei Industrial Zone West Section, Cixi, Zhejiang, China
Tel 0574-63631987
Fax 0574-63630233
Http://www.wang-tong.com


M-1607-00K0 Work Manual

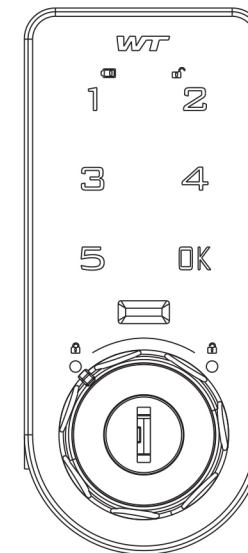

WANGTONGLOCKS CO.,LTD

 Low voltage indicator light

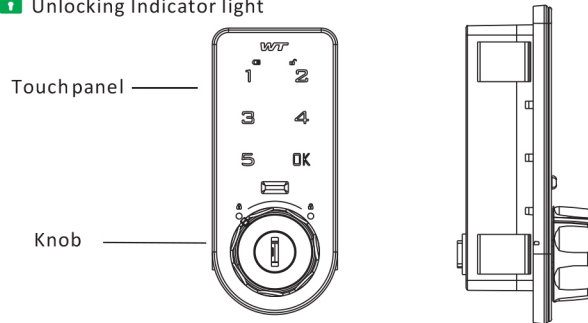

 Unlocking Indicator light



How to operate

Lock & unlock

Unlock

1. Input factory default user password "1234+OK" or input factory default management password "4321+OK"
 2. Buzzer gives out a long di sound, the green indicator light  is on.
 3. Pls rotate the knob within 3 seconds.
- * When password is wrong alarming sound di..di..di.. 3 times.
* When buzzer gives out sound di..di..di.. 3 times and the red indicator light  is on means low voltage.
* Pls note that after using management password, the user password will be back to 1234.




Lock

Rotate back 90 degree to lock.

Setting



1. Change password

1. Input factory default user password 1234+OK or input factory default management password 4321+OK, buzzer gives out a long di sound, the unlocking indicator light  will be on.
 2. Press OK at least 2 seconds, unlocking indicator light twinkle, input new password 123123, press OK, when you heard a long di sound means password already been changed.
- * Password can be consisted of 4-15 digits, pls note that the management password can not be the same as user password.





2. Turn on public mode, set temporary password

Turn on public mode


1. Input management password + OK, buzzer gives out a long di sound, unlocking indicator light  is on.
2. Press OK at least 2 seconds, unlocking indicator light  twinkle, press OK again.
3. Input 44, press OK, when you heard a long di sound means public mode already been set.





Set temporary password

1. Press OK, the green indicator light  flash
2. Input the new password consisted of 4-15 digits
3. Press OK, when you heard a long di sound, the green indicator light  is on, temporary password already been set.

* Temporary password can be used for 1 time only



* The indicator light  will twinkle every three seconds when the temporary password is valid.

3. Turn off public mode

1. Input management password + OK, buzzer gives out a long di sound, unlocking indicator light  is on.
2. Press OK at least 2 seconds, unlocking indicator light  twinkle, press OK again.
3. Input 43, press OK, when you heard a long di sound means public mode already been turned off.



4. Turn on/off Fake Pin code function

1. Input management password + OK, buzzer gives out a long di sound, unlocking indicator light  is on.
2. Press OK at least 2 seconds, unlocking indicator light  twinkle, press OK again.
3. Input 42, press OK, when you heard a long di sound means Fake Pin code mode already been turned on.
4. Input 41, press OK, when you heard a long di sound means Fake Pin code mode already been turned off.



* Introduced with Anti-Theft Technology and Fake PIN password function; you can input any code(s) before or after the real password to prevent the real password being peeped.