

MOST COMMON FUNCTIONS

FOR SWEDSTYLE HAND CONTROLLERS

2025-03-19

SWEDSTYLE MOTION S



RESET

1. Lower the table to its lowest position by pressing ▼
2. Release the button.
3. Press ▼ again and keep it pressed for 8 seconds.
4. You will hear a beep.
5. Release the button
6. The reset is now complete and the frame is ready to use.

FACTORY RESET

1. Press simultaneously ▲ + ▼ for at least 30 seconds.
2. After 5 seconds, the table will move to its lowest position.
3. Keep pressing for another 25 seconds until you hear a long beep.
4. The factory reset is complete and the frame is ready to use.

CONTAINER STOP

1. Set the highest position by moving the table to desired max height.
2. Press simultaneously ▲ + ▼
Release ▼ within 2 seconds.
3. Press ▼ 3 times slowly.
Wait for a beep.
4. The highest position has now been saved.
5. Set the lowest position by moving the table to desired height.
6. Press simultaneously ▲ + ▼
Release ▲ within 2 seconds.
7. Press ▲ 3 times slowly.
Wait for a beep.
8. The the lowest position has now been saved.
9. The containerstop is now set

DEACTIVATE

1. Deactivate the container stop by moving the table to the position you want to delete.
2. Repeat the same procedure as when activating the stop. After pressing the up or down button 3 times, wait 2 seconds until your hear a beep.

SWEDSTYLE MOTION I



RESET

1. Lower the table to its lowest position by pressing ▼
2. Release the button.
3. Press ▼ again and keep it pressed for 8 seconds.
4. You will hear a beep.
5. Release the button
6. The reset is now complete and the frame is ready to use.

FACTORY RESET

1. Press simultaneously ▲ + ▼ for at least 30 seconds.
2. After 5 seconds, the table will move to its lowest position.
3. Keep pressing for another 25 seconds until you hear a long beep.
4. The factory reset is complete and the frame is ready to use.

CONTAINER STOP

1. Set the highest position by moving the table to desired max height.
2. Press simultaneously ▲ + ▼
Release ▼ within 2 seconds.
3. Press ▼ 3 times slowly.
Wait for a beep.
4. The the highest position has now been saved.
5. Set the lowest position by moving the table to desired height.
6. Press simultaneously ▲ + ▼
Release ▲ within 2 seconds.
7. Press ▲ 3 times slowly.
Wait for a beep.
8. The the lowest position has now been saved.
9. The containerstop is now set

DEACTIVATE

1. Deactivate the container stop by moving the table to the position you want to delete.
2. Repeat the same procedure as when activating the stop. After pressing the up or down button 3 times, wait 2 seconds until your hear a beep.

SWEDSTYLE MOTION I



RESET

1. Lower the table to its lowest position by tilting the control plate down.
2. Release the plate.
3. Tilt down again and keep it pressed until you will hear a beep.
5. Release the plate
6. The reset is now complete and the frame is ready to use.

FACTORY RESET

1. Lower the table to its lowest position by tilting the control plate down.
2. Release the plate.
3. Tilt down again and keep it pressed. After 5 seconds, the table will move to its lowest position.
4. Keep pressing for another 25 seconds until you hear a long beep.
5. Three dashes will appear on the display (- - -)
6. The factory reset is complete and the frame is ready to use.

MEMORY POSTIONS

1. Move the table to the height you want to save.
2. Press the button on the back of the control plate until the display shows P. Keep the button pressed and select memory position by tilting the control-plate up for P1 and tilting it down for P2.
4. To move the table to a saved memory press the button on the back. Keep it pressed and tilt the control plate up for P1 and down for P2. Keep pressing until the table has reached the position.

SWEDSTYLE MEMORY S



RESET

1. Lower the table to its lowest position by pressing **▼**
2. Release the button.
3. Press **▼** again and keep it pressed for 8 seconds.
4. You will hear a beep.
5. Release the button
6. The reset is now complete and the frame is ready to use.

FACTORY RESET

1. Press simultaneously **▲ + ▼** for at least 30 seconds.
2. After 5 seconds, the table will move to its lowest position.
3. Keep pressing for another 25 seconds until you hear a long beep.
4. Three dashes will appear on the display (---)

CONTAINER STOP

1. Set the highest position by moving the table to desired max height.
2. Press simultaneously **▲ + ▼**
Release **▼** within 2 seconds.
3. Press **▼** 3 times slowly.
Wait for a beep.
4. The the highest position has now been saved.
5. Set the lowest position by moving the table to desired height.
6. Press simultaneously **▲ + ▼**
Release **▲** within 2 seconds.
7. Press **▲** 3 times slowly.
Wait for a beep.
8. The the lowest position has now been saved.
9. The containerstop is now set

MEMORY POSTIONS

1. Move the table to the height you want to save.
2. Press **S** until the display starts to flash.
3. Select memory position by pressing **I**, **II**, **III** or **IIII**.
Eg. II, P2 will appear in the display.
4. To move the table to a saved memory **I**, **II**, **III** or **IIII**, keep pressing the button until it has reached the position.

SET SENSOR

1. Press simultaneously **I + II**.
2. Wait until the display flashes and shows a number between 0 - 9.
3. Select sensitivity (1-9) with **▲** and **▼**.
1 is low, 9 high, 0 disables the sensor. Our boxes have sensitivity 5 as standard.
4. Wait until the display has stopped flashing
5. Sensor sensitivity is set.

DEACTIVATE

1. Deactivate the container stop by moving the table to the position you want to delete.
2. Repeat the same procedure as when activating the stop. After pressing the up or down button 3 times, wait 2 seconds until your hear a beep.

CM TO INCHES

1. Press simultaneously **I + II + S**.
2. Wait until the display flashes and shows C - I.
3. Press **I** for cenimeters or **II** for inches.
4. The display will now stop flashing and show the selected unit C or I.

SWEDSTYLE MEMORY USB



RESET

1. Lower the table to its lowest position by pressing **▼**
2. Release the button.
3. Press **▼** again and keep it pressed for 8 seconds.
4. You will hear a beep.
5. Release the button
6. The reset is now complete and the frame is ready to use.

FACTORY RESET

1. Press simultaneously **▲ + ▼** for at least 30 seconds.
2. After 5 seconds, the table will move to its lowest position.
3. Keep pressing for another 25 seconds until you hear a long beep.
4. Three dashes will appear on the display **---**

CONTAINER STOP

1. Set the highest position by moving the table to desired max height.
2. Press simultaneously **▲ + ▼**
Release **▼** within 2 seconds.
3. Press **▼** 3 times slowly.
Wait for a beep.
4. The the highest position has now been saved.
5. Set the lowest position by moving the table to desired height.
6. Press simultaneously **▲ + ▼**
Release **▲** within 2 seconds.
7. Press **▲** 3 times slowly.
Wait for a beep.
8. The the lowest position has now been saved.
9. The containerstop is now set

MEMORY POSTIONS

1. Move the table to the height you want to save.
2. Select memory position by pressing **1** or **2** simultaneously with **▲** or **▼** for 2 seconds. Eg. 2, P2 will appear in the display
3. To move the table to a saved memory **1** or **2**, keep pressing the button until it has reached the position.

SET SENSOR

1. Press simultaneously **1 + 2**.
2. Wait until the display flashes and shows a number between 0-9.
3. Select sensitivity (1-9) with **▲** and **▼**.
1 is low, 9 high, 0 disables the sensor. Our boxes have sensitivity 5 as standard.
4. Wait until the display has stopped flashing
5. Sensor sensitivity is set.

DEACTIVATE

1. Deactivate the container stop by moving the table to the position you want to delete.
2. Repeat the same procedure as when activating the stop. After pressing the up or down button 3 times, wait 2 seconds until your hear a beep.

LOCK

1. Press **🔒** for one second. Release the button.
2. The display will show 0-L to indicate that the lock is activated.
3. Don not touch any other buttons for 20 seconds.
4. Unlock by press **🔒** for 3 seconds.

CM TO INCHES

1. Press simultaneously **1 + 2 + 🔒**
2. Wait until the display flashes and shows C - I.
3. Press **1** for cenimeters or **2** for inches.
4. The display will now stop flashing and show the selected unit C or I.